

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

### QUAD ROW LED TAILGATE LIGHT


Thank you for choosing Rough Country for all your lighting needs.

**⚠ WARNING** Please read instructions before beginning installation. Vehicles must have a 4 pin flat trailer connector for the operation of the light bar functions. This tailgate light bar is easy and only needs a measuring tape and masking tape to install. The light mounts in the recess area between the bottom of the tailgate and the bumper shelf and plugs into a standard four pin trailer plug.

**⚠ WARNING** Light bar must be installed at 60 degrees or higher, if the temperature is lower a heat gun should be used to ensure proper adhesion.

#### INSTALLATION INSTRUCTIONS

1. Thoroughly clean the mounting surface, use warm soapy water first to remove all wax and dirt. Then dry and use a cleaner such as rubbing alcohol to clean the surface. Once clean do not touch. **See Photo 1.**
2. Measure across the tailgate and place a piece of tape marking the center. Next measure the light bar and mark center with a piece of tape.
3. Place the light bar under the tailgate and mark each end with a piece of tape under the light bar when you have it centered up and down.
4. Make sure the wire end of the light bar is to the driver side and peel off the adhesive tape backing in **Photo 2.** Place the light bar under the tailgate and align with the tape markings. Lightly press on the light, you may have to adjust the position of the light bar. When the position of the light bar is correct firmly press down on the adhesive tape.

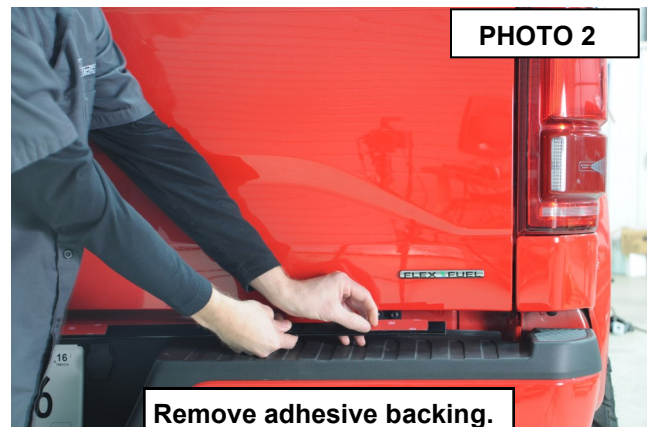

5. Use tie wraps to hold the wire bundle up and out of the way. Plug the connector in the vehicles flat trailer plug connector. A round to flat trailer plug converter can be purchased at any auto part store if you vehicle is not equipped with a flat plug. **See Photo 3.**
6. Test the light by checking to make sure all turn signals and stop signals work as they should. If not, the red wire will need to be wired to a switched 12v circuit to give the light sufficient power.
6. Connect the white wire to the reverse light positive wire going to tail light or 7 pin trailer plug, if equipped.
7. Make sure all wires are secure, and not hanging down below the rear bumper.



Thank You for choosing Rough Country for your off road needs.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

